## 13 Quick setup

This product is compatible

1. APP download

In the application store, to search and scan the following two-dimensional code to download and install



MiniRobot App Google play



MiniRobot App Apple market

#### MONORIM ®



**T2-S** 

Electric scooter operating manual



#### Welcome to use

Thank you for choosing TO electric scooter (hereinafter referred to electric scooter), electric scooter is a stylish sports entertainment equipment.

#### Contents

### III. Non-warranty regulations

- 1. Unauthorized repair, misuse, collision, negligence, abuse, infusion, accident, alteration, improper use of non-product accessories or torn, altered label and anti-counterfeit mark;
- 2. Has been beyonded the period of validity of the three guarantees;
- 3. Any damage is caused by force majeure;
- 4. Does not conform to the listed performance situation in the *Performance Fault List of Electric Scooter*;
- 5. Due to man-made causes of this product and its accessories produce listed performance fault in the *Electric Scooter Performance Table*;
- 6. Damage caused by man-made reasons (including but not limited to the liquid entering into vehicles, puncture, impact, the traces and damage of the normal use of the appearance, etc.):
- 7. If the product is used for commercial use, it is not guaranteed.

#### IV. The performance fault table of electric scooters

| Designation      | Performance faults                                 |
|------------------|--|
|                  | Under normal use, the motor cannot work            |
|                  | Under normal use, the controller appears a failure |
| Electric scooter | Under normal use, battery appears failure          |
|                  | Under normal use, appearing deformation, break     |
|                  | can not continue to use                            |

### 11 Warranty Policy

Electric scooter after-sales service is strictly based on the *People's Republic of China Consumer Protection Law* and *People's Republic of China Product Quality Law* to implement the three-guarantee service, the service content is as follows:

- I. The warranty period
- 7 days from the date of your signing, the product appears Electric Scooter Performance Fault Table
  listed in the performance fault situation, through the millet service center test to determine that is
  free to enjoy the return or replacement services;
- 2. 8 15 days from the date of your signing, the product appears *Electric Scooter Performance Fault Table* listed in the performance fault situation, through the millet service center test to determine that is free to enjoy the replacement or repair services;

12 months from the date of your signing, the product appears Electric Scooter Performance Fault

Table listed in the performance fault situation, through the millet service center test to determine that is free to enjoy the replacement services;

Friendly tips: It is advisable to keep the packing box for at least 15 days from the date of receipt of the shipping container, because of using packing boxes to ensure the safe transportation of the product at the

process of transporting.

II. The warranty content.

| ii. The warran              | 11. The warranty content   |        |  |  |  |
|-----------------------------|--|--------|--|--|--|
| Category                    | Maintenance contents   |        |  |  |  |
|                             | Maintenance contents   |        |  |  |  |
| Machine<br>body             | Frame assembly, wheel drive, controller assembly, handlebar, forehead      |        |  |  |  |
|                             | main body, middle tank instrument board, rear wheel, brake disc, disc      | One    |  |  |  |
|                             | brake assembly, folding handle, front fork, front fork front tube rotating | year   |  |  |  |
|                             | parts, the control bus and brake line                                      |        |  |  |  |
| Accessories                 | Detter described and for an arrival  |        |  |  |  |
|                             | Battery, charger, brake and finger switch                                  |        |  |  |  |
| Wearing parts of appearance | Anti-collision strip, headlight assembly, instrument cover, tires, outer   |        |  |  |  |
|                             | tubes, inner tubes, bell components, fender, rear taillights, decorative   | Three  |  |  |  |
|                             | cover, foot support components, battery compartment cover, foot pad,       | months |  |  |  |
|                             | charging port seat and rubber stopper                                      |        |  |  |  |

Notes: Socket head wrench and extended inflatable mouth as the product random supplies, and it has no warranty period.

### 1 Product and parts

Whole Vehicle



Access

7

Socket head wrench



Please carefully check whether the contents of the box are intact.

Screw x 4

## 2 Functional sketch

## MONORIM ®





Electric power display

Mode indication

Power switch

battery power, the power light will change instructions state from top to bottom in accordance with the order of the normal, flashing and off. When the 4 power light is nomally on, the power is between 100% and 86%; 3 lights, 1 flashing, the electricity is between 85% -71%; And so on, the flashing power light will go out with the power consumption. When the bottom of the power light flashes, on behalf of the power is about to run out, please charge and then use. When the power is exhausted, all four power lights are extinguished, the vehicle will use inertia to slide to stop naturally. The bottom of the power lights is provided with white and green, when the vehicle work in normal mode, the light is displayed as white; The light is green when the vehicle is operating in energy saving mode. (Energy saving mode: the maximum speed of 18km / h, te throttle is more smooth, and it is suitable for beginners to know riding well.

All four power lights indicate the power on the control panel. With the consumption of

Press the switch briefly can turn on the vehicle, press the switch over 2s or more to turn off the vehicle. After the vehicle turned on, press the switch briefly: Turn on / off the running lights; Press continuously switch twice: Switch between normal mode and power saving mode.

10 Name and content of harmful substances in the product

|                               | Harmful substance |                 |                 |                              |                                |   |
|-------------------------------|-------------------|-----------------|-----------------|------------------------------|--------------------------------|---|
| Name of component             | Plumbum<br>(Pb)   | Mercury<br>(Hg) | Cadmium<br>(Cd) | Hexavalent chromium (Cr(VI)) | Polybrominated biphenyls (PBB) | Polybrominated<br>diphenyl ethers<br>(PBDE) |
| Charger                       | X                 | 0               | 0               | 0                            | 0                              | 0   |
| Battery                       | X                 | 0               | 0               | 0                            | 0                              | 0   |
| Air tap                       | X                 | 0               | 0               | 0                            | 0                              | 0   |
| Charging port                 | X                 | 0               | 0               | 0                            | 0                              | 0   |
| Master control board          | X                 | 0               | 0               | 0                            | 0                              | Ο   |
| Instrumentation circuit board | X                 | 0               | 0               | 0                            | 0                              | Ο   |
| Wheel motor                   | X                 | 0               | 0               | 0                            | 0                              | 0   |
| Car frame                     | 0                 | 0               | 0               | 0                            | 0                              | 0   |
| Tire                          | 0                 | 0               | 0               | 0                            | 0                              | 0   |

This Table is formulated in line with the SJ/11364.

component is beyond the limit prescribed in GB/T 26572.

O: Indicate that the content of this harmful substance in all homogeneous materials of this component is below the limit prescribed in GB/T 26572.

X: Indicate that the content of this harmful substance in at least one homogeneous materials of this



16

## 9 Model parameter table

| Performance index  | Item                             | Electric scooter parameters                                    |  |  |
|--------------------|----------------------------------|--|--|--|
| Product dimension  | Length × width × height [1] (cm) | 115cm*58cm*15.3cm  |  |  |
|                    | After folding: Length × width ×  | 108 x 43x49  |  |  |
|                    | height (cm)                      |  |  |  |
| Product weight     | Weight of finished automobile    | About 1 6 . 3 k g  |  |  |
| Riding request     | Maximum load (kg)                | 100  |  |  |
|                    | Applicable age (years)           | 16-50  |  |  |
|                    | Applicable height (cm)           | 120-200  |  |  |
| The main           | Maximum speed (km/h)             | About 2 5 - 2 8  |  |  |
| parameters of the  | Typical life [2] (km)            | About 30   |  |  |
| vehicle            | Maximum gradient ( %)            | About 14   |  |  |
|                    | Applicable terrain               | Cement, asphalt pavement, flat soil pavement, no more than     |  |  |
|                    |                                  | 1cm steps, no more than 3cm wide channel                       |  |  |
|                    | Working temperature ℃            | -10-40   |  |  |
|                    | Storage temperature (°C)         | -20-45   |  |  |
|                    | Protection grade                 | IP54   |  |  |
| Battery pack       | Rating voltage (VDC)             | 3 6 V =  |  |  |
| parameters         | Maximum charge voltage (VDC)     | 4 2 V =  |  |  |
|                    | Rated capacity (Wh)              | 280w   |  |  |
|                    | Intelligent battery management   | Temperature abnormality / short circuit / undervoltage to auto |  |  |
|                    | system                           | sleep / overflow current / double overcharge / double over     |  |  |
|                    |                                  | discharge protection   |  |  |
| Motor parameters   | Rated power (W)                  | 350w   |  |  |
|                    | Maximum power (W)                | 380w   |  |  |
| Charger parameters | Rated power (W)                  | 71   |  |  |
|                    | Rated input voltage (VAC)        | 100-240V~  |  |  |
|                    | Rated output voltage (VDC)       | 4 2 V =  |  |  |
|                    | Rated current (A)                | 2ah  |  |  |
|                    | Product certification            | CE, FCC, RoHS  |  |  |
|                    | Charging time (h)                | about 5  |  |  |

- (1) Body height: The distance from the ground to the top of its body
- (2) Typical life: When the electric scooter is full, 75kg load, 25 degrees Celsius, flat road without wind environment, in the energy-saving mode to keep at 15km / h even speed conditions measured, the actual life due to load, temperature, wind speed, road and operating habits and other factors to be different.

Note: Data and parameters vary with different models. Subject to change without notice.

## 3 Body assembly

# **MONORIM** ®



## 4 Charger connection




Open the rubber stopper





5 Learn to drive

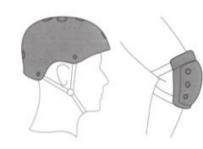


There is a risk of falling injury during the study period, so please wear a helmet and a protective gear as shown




1 Turn on the power and check the power indicator



If you feel the brakes are too tight, please use the M5 hex wrench counterclockwise to release the pressure plate screws on the disc brake seat, return the brake line to make the exposed tail length slightly shorter, and lock the pressure plate screws; If you feel the brake is too loose, release the pressure plate screws, drag the brake cable to make the exposed tail length slightly longer, and then lock the pressure plate screws.

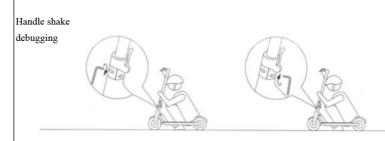

 If your standpipe in the electric scooter is shaking, please use the M5 hex wrench to lock the two screws at the folding mechanism.



If your electric scooter front and rear tires are deficency, please use the extended inflatable month to connect the car body tires to cheer. First remove the front and rear tire inflatable mouth cap, and then tighten the extension of the inflatable mouth and tire inflatable mouth, and connect the pump to inflate after they are to be tightened.

#### 8 Daily maintenance

Electric scooter cleaning and storage

If the electric scooter body surface cracks, please use a soft cloth dipped in a small amount of water to wipe; If there is difficult to clean the dirty, you can use toothpaste and wash with a toothbrush repeatedly, and then use a damp cloth to clean. If there are scratches in body plastic, you can use sandpaper or other grinding materials to polish.

Prompt: Do not use alcohol, gasoline, kerosene or other corrosive, volatile chemical solvent cleaning, otherwise it will seriously damage the appearance and internal structure of the body. It is forbidden to use a pressure water gun to spray and flush, and ensure that the electric scooter is closed all along and that the charging cable has been unplugged and the rubber cap is tightened. Otherwise, it may cause electric shock or serious failure due to internal water intake.

When not in use, try to store electric scooter in the dry room and cool place, try to avoid a long time storage in the outdoor. Sun exposure / overheating / cold outdoor environment will accelerate the appearance of electric scooters and tire aging and reduce the life of electric scooters and their battery pack.

#### Electric scooter battery maintenance

- 1. Do not use other models or brands of batteries, or there may be a security risk.
- 2. Do not touch the battery contacts, and do not open or expose the shell. Avoid metal objects touching the battery contacts to cause a short circuit. Or it may cause damage to the battery or personal injury or death.
- 3. Only use the original charger to charge, otherwise there is a risk of damage or fire.
- 4. Improper disposal of used batteries may cause serious contamination of the environment. Observe local regulations when discarding this battery pack. Do not dispose of the battery pack, to protect the natural environment together.
- 5. After each use, please recharge the battery and then store, and it is conducive to extend battery life.

Do not place the battery in a high temperature environment higher than 50  $^{\circ}$  C or below -20  $^{\circ}$  C (for example, do not place the electric scooter or its battery pack put it under summer exposure in a car), and do not put the battery into a fire. Otherwise it may lead to battery failure, overheating, and even fire risk. When not using for more than 30 days, please be fully charged, stored in a cool dry place, and fully charged every 60 days, or it may damage the battery, and this damage is not within the warranty.

To avoid the full exhaustion of electricity and recharge, as far as possible with the charge with the use, which can greatly extend the battery life. In addition, at room temperature, the battery pack can play a higher mileage and performance; And if it is used in an environment below  $0\,^\circ$  C, battery life and performance will drop. Typically, at -20  $^\circ$  C, the mileage may be only half or less at room temperature. And the temperature rises, the battery mileage will be restored, please refer to the specific APP in the remaining mileage display.


Prompt: A fully charged electric scooter, depleting its stored power after about 120-180 days of standby. The battery inside has the smart chip to record the battery charge and discharge situation, and prolonged non-charging damage will not be recharged, at this time if not timely charging, it is likely to lead to excessive battery discharge damage, this damage is irreversible, and can not enjoy free warranty. (Note: non-professional personnel is prohibited to the remove the battery pack, or it may be lead to serious security incidents due to electric shock or short circuit!)




2 Single feet stand on the board, the other foot pedal back



3 After electric scooter slide, the other foot pedal, when feet remain stable, tap the port finger (to be 5km / h above the speed will start the throttle)

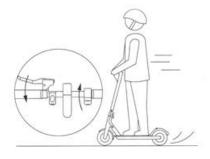

4 Release the throttle finger can slow deceleration, energy recovery system automatically open to help slow down, emergency brake need to shake the brake handle at the front left handle

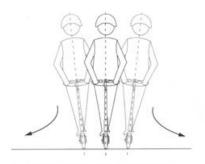


5 When the focus is slightly tilted to the steering direction, and slowly turn the handle

### 6 Safety instructions

 
#### Avoid security risks








 Encounter deceleration zone / elevator threshold / potholes and other unconventional road pavement, please do not pass at high-speed. Encounter rough road, please keep in the low speed (5-10km / h). A slight kneeling allows you to better adapt to the complex road

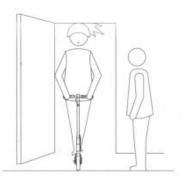







1

Do not accelerate at downhill

## 7 Folding and transporting

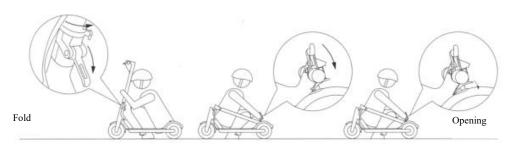


Make sure that the electric scooter is turned off, standpipe will dip through folding, open the folding wrench, and aim a the bell position and hook the bell with the rear mudguard. When opening you need to press the bell hook at the hook until the bell hook is out of the stall after the hook, the vertical straight standpipe and lock folding plate back to fold.

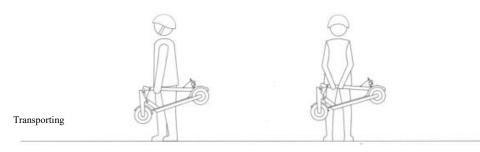


After folding, hold the standpipe with one hand or both hands to transport.

#### Do not try the dangerous actions




 

It is forbidden to travel in more than 2cm-

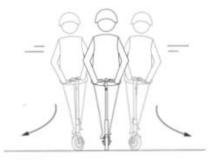


It is forbidden to turn the handle at high speed

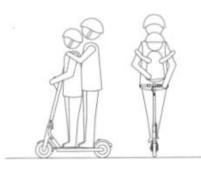

Prohibit many people at the same time driving an electric scooter or driving with children




It is forbidden to step on the back of the fender

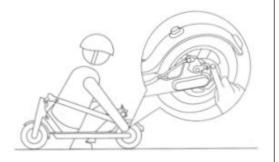

Oo not touch the disc brakes



It is forbidden to not hold the handlebar when driving

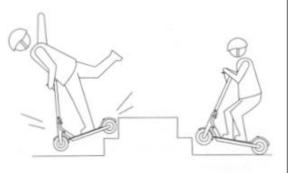

It is forbidden to ride electric scooters upstairs, downstairs or jump obstacles

09

#### Safety instructions

- An electric scooter is a sporting entertainment tool that is not a vehicle, but once you drive it into a public area, it will also have a vehicle property, so there are also possible safety risks for all modes of transport. Strictly follow the instructions in this manual to drive for the maximum extent to protect you and the others' safety, and to ensure compliance with national and provincial traffic regulations and traffic regulations.
- At the same time, you need to understand: Once you have an electric scooter on a public road or other public place, you may be exposed to the risk of unauthorized driving / improper operation of others or vehicles, even if you are in full compliance with this safe driving guide. Like walking or cycling may also be hurt by other means of transport; As with all vehicles, the faster the electric scooter is driving, the longer the brakes need, and the emergency brakes on some smooth surfaces can also cause the wheels to slip and lose balance or even fall. Therefore, It is important to be vigilant and maintain the proper speed during driving, and it is important to maintain a reasonable safety distance with others and the transport means. Please be vigilant and drive at low speed before entering unfamiliar terrain.
- Please respect the right of pedestrian way when driving. Avoid frightening pedestrians, especially the children. When pedestrians passing through, remind pedestrians and slowing down when passing. As far as possible from the left side of the pedestrian (applicable to the country where the vehicle is traveling right). Face to face with pedestrians, keep on the right and lower speed.
- We must strictly follow the safety requirements of this manual for drivers in countries and regions, where there are no national standards and regulations for electric scooters, such as in China. Millet Communications Co., Ltd shall not be liable for any liability, personal injury, accident, legal dispute, and all other unfavorable events resulting from the use of violating the instructions indicated in this manual.
- Do not lend the electric scooter to a person who does not operate to avoid injury. If give the electric scooter to a friend, be sure to be responsible for the safety of your friends, you should teach him (her), and tell him (her) must wear safety care.
- Please check the electric scooter for each time before driving. If you find that the parts are loose, the battery life is obviously reduced, the tire is slow to leak or excessive wear, turn to abnormal sound or malfunction, please stop using it immediately, and do not driving force. And call Millet Service number: 400-100-5678 for professional guidance or maintenance services.





Do not press the throttle when walking the electric scooter



Please avoid obstacles to ride





Do not hang heavy objects such as backpack on the handlebar



/ Do not ride on the pedal or on the ground

11